




OPERATOR'S MANUAL

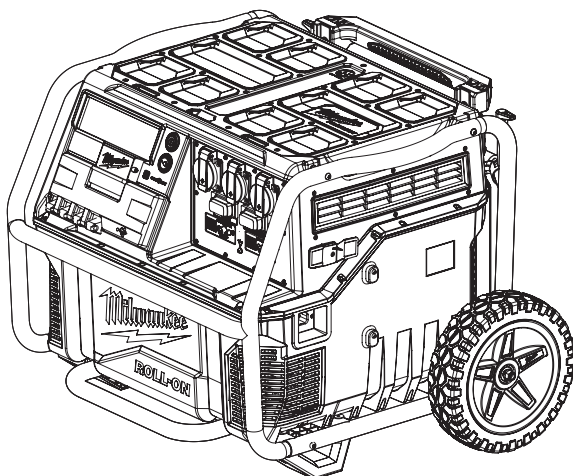

Cat. No.
MRPS25

The power supply must be
charged before first use.

ROLL-ON™ 7200W/3600W 2.5kWh POWER SUPPLY

WARNING

 To reduce the risk of injury, user must read and understand operator's manual.

IMPORTANT SAFETY INSTRUCTIONS

⚠WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power supply. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WORK AREA SAFETY

- **Avoid dangerous environments.** Do not charge power supply in rain, snow, damp or wet locations. Do not use or charge power supply in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when plugging in the power supply, possibly causing fire.
- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Close supervision is necessary when a power supply is used near children.**
- **Never leave the power supply unattended while in use.**
- **Do not stack power supplies.**
- **Arrange power cords carefully to avoid hazardous environments.** Tripping or snagging on power cords can cause injury and power supply damage. Keep power cords dry and off the ground. Do not allow power cords to run through puddles or across wet ground.

ELECTRICAL SAFETY

- **Charge power supply only with the provided power cord. Do not use if the power cord is damaged in any way.** If damaged or missing, replace with identical replacement parts.
- **Power cord plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) equipment.**
- **Do not abuse the power cord. Never use the power cord for carrying, pulling or unplugging the power supply.** Keep power cord away from heat, oil, sharp edges or moving parts. Do not unplug by pulling on the power cord. To unplug, grasp the plug, not the power cord.
- **Unplug the power cord from outlet when not in use and before servicing or cleaning.**
- **Avoid using an extension cord for AC input. When unavoidable, use a suitable extension cord.** Make sure that the extension cord is in good electrical condition.
- **The power supply output is not connected (isolated) to the AC outlet earth pin and frame; electrical equipment that requires this connection may not operate unless properly connected to the earth pin.**
- **Connect supply cord only to a properly earthed outlet.**

• **Connect to a RCD protected circuit when charging.**

NOTE: Press TEST switch monthly. If the RCD does not operate return the unit to a **MILWAUKEE®** service facility.

• **Do not connect the power supply output to a building's electrical system.**

• **Use only a single tool per outlet.**

⚠WARNING **DO NOT** use power boards or double adaptors. Connect only one device to any one outlet at a time. If an extension cord is needed, it is recommended to use heavy duty extension cords and limit total length of cable to 50m to connected device. RCD's need to be tested monthly by pressing the 'RCD Test' button. RCD must operate instantly.

• **Do not permanently install in a vehicle.**

• **Do not overload the power supply's capacity.** Exceeding the power supply's wattage/ampere capacity may damage the power supply and/or electrical devices connected to it.

• **Corded equipment may require more power consumption than this power supply is capable of providing.** Check the equipment's manual to avoid damage to the power supply or risk of personal injury.

• **Do not short circuit AC outputs.** A short-circuited power supply may cause fire, personal injury, and power supply damage. A power supply will short circuit if a metal object makes a connection between the line and neutral terminals of the AC outputs. Do not place a power supply near anything that may cause a short circuit.

• **Do not allow fluids to flow into power supply.** Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

• **Do not use if power supply has been immersed in a flooded area.** Do not place or store power supply where it can fall or be pulled into water or liquid.

• **Do not use a power supply or corded equipment that has been damaged or modified.** Damaged or modified products may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

• **Do not expose a power supply or corded equipment to fire or excessive temperature. Do not use an external device to heat the power supply.** Do not burn or incinerate the power supply even if it is damaged, dead or completely discharged. Exposure to fire or temperature above 130°C (265°F) may cause explosion. Toxic fumes and materials are created when burned.

• **Do not use a power supply that is smoking/showing signs of melting/making unusual noises/heating up. Move power supply away from structures or combustible materials. If a fire starts, call fire department.**

PERSONAL SAFETY

• **Always use common sense and be cautious when using unit.** It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use this product if you do not understand these operating instructions or you feel the work is beyond your capability; contact **MILWAUKEE®** Tool or a trained professional for additional information or training.

•Do not sit or step on the power supply.

•Only charge in a well ventilated area. Do not block vents; keep free of dust, lint, hair, and anything else that may reduce air flow. Only use power supply in an upright position. Do not put fingers, hands, or other objects into openings.

•Do not smoke, strike a match, or cause a spark in the vicinity of a charging power supply. Vented gases may explode.

USE AND CARE

•Know your power supply. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this power supply. Do not alter or modify the power supply from the original design or function. Misuse and improper handling can cause injury.

•Use corded equipment according to the equipment manufacturer's instructions and in locations specified by the manufacturer. Unit is not suitable for outdoor/rain use.

•Suitable for use in a repair facility. This equipment has arcing or sparking parts which should not be exposed to flammable vapours; locate equipment at least 450 mm (18") above the floor when used in a repair facility.

•Operating this power supply less than 1 m (3') from building or other obstruction can cause overheating and damage to the power supply. For proper cooling, allow at least 1 m (3') of empty space around the power supply.

•Always assume the AC outlets are live. The auto start ONE-KEY™ feature can result in unexpected starting of corded equipment.

•This power supply is not intended for use with emergency medical equipment or life support devices.

•Do not use the power supply as a workbench where cutting, drilling, or other activities could cause damage to the power supply.

•Do not place more than 68 kg on power supply when stationary. Do not load higher than the extended handle position.

•Follow all charging instructions and do not charge a power supply outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the integrated battery and increase the risk of fire.

•Do not crush, drop, damage or disassemble power supply. Do not use a power supply that has received a sharp blow, been dropped, run over, or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on, in a vehicle accident). If it is damaged, contact an authorised MILWAUKEE® service facility.

•Under abusive conditions, liquid may be ejected from the integrated battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the integrated battery may cause irritation or burns.

SERVICE

•Inspect power supply and power cord regularly. Have the power supply serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power supply is maintained. Do not disassemble power supply. Contact a MILWAUKEE® service facility for ALL repairs.

•Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE® service facility for a replacement.

ACCESSORIES

•Use only recommended attachments. Use of an attachment not recommended or sold by the power supply manufacturer may result in a risk of fire, electric shock or personal injury.

•Always follow all manufacturer's safety rules of the attachments.

TRANSPORTING

•Do not place more than 25 kg on power supply when transporting. Do not load higher than 30 cm (11").

•To reduce the risk of injury, fire, or explosion due to damaged battery packs, remove side mounted chargers before transporting.

•Secure the power supply before transporting to prevent tipping, rolling, slipping, and falling.

•When moving power supply, do not overreach. Keep proper footing and balance at all times. Clear the area of obstructions. This enables better control in unexpected situations.

•Use multiple people whenever it is necessary to lift or carry the power supply. The power supply is heavy. Lift with legs, not back.

•Only lift the power supply by the roll cage, do not lift by the handle.

•Do not transport power supply with corded equipment plugged into the outlets.

STORAGE

•To prevent the risk of fire or shock; store your power supply upright in a cool, dry place. Do not store where temperatures may exceed 50°C (122°F) such as in direct sunlight, a vehicle, or metal building during the summer. Do not store outside.

•Always follow all manufacturer's safety rules of the attachments.

ADDITIONAL BATTERY SAFETY RULES

AWARNING To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

AWARNING Do not charge non-rechargeable batteries.

SPECIFICATIONS

Cat. No.	MRPS25
Variable Charge Rate	500W - 1,150W, via ONE-KEY™ App
Rated Input Voltage.....	230-240 V AC
Rated Input Amps.....	5 A
Total Rated Output (230 V Outlets)	
Peak Watts	7,200 W for 5s
Rated Watts @ 65% Duty Cycle...	3,600W 25°C max 2,000W 40°C max
Voltage.....	230 V AC
Rated Frequency.....	50 Hz
Rated Output Voltage	
(USB-A)	5 V DC @ 2.4 A (12 W)
(USB-C)	20 V DC max @ 3 A, 60W max
Weight (Tool Only)	47.2 kg
Recommended Ambient	
Operating Temperature	-20°C to 40°C
Recommended Ambient	
Charging Temperature.....	5°C to 40°C

SYMBOLOLOGY

	Volts
	Direct Current
	Alternating Current
	Amps
	Hertz
	Power button
	Risk of Electric Shock
	Read Operator's Manual
	Universal Serial Bus (USB)
	Universal Serial Bus Type-C (USB-C)
	Two person lift
	Do not immerse in water or use power supply that has been immersed.
	Do not step
	Class II equipment with protective equipotential bonding




Regulatory Compliance Mark (RCM). This product meets applicable regulatory requirements.



Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

FUNCTIONAL DESCRIPTION

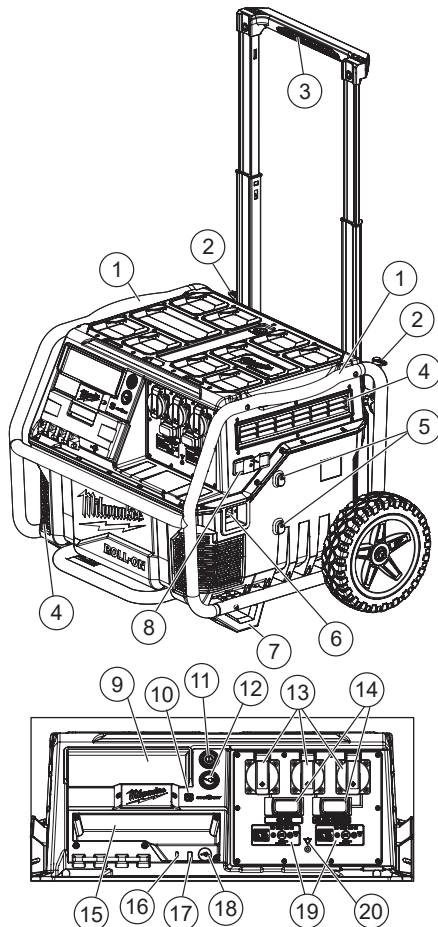

- | | |
|------------------------|--------------------------------------|
| 1. Roll cage | 11. Power button |
| 2. Cord holders | 12. AC output power button |
| 3. Handle | 13. RCD protected outlets |
| 4. Vents | 14. Circuit breaker |
| 5. Charger mounts | 15. Storage |
| 6. AC input | 16. USB-C |
| 7. Feet | 17. USB-A |
| 8. Charger cord holder | 18. USB power button |
| 9. Display | 19. RCD |
| 10. ONE-KEY™ indicator | 20. Protective equipotential bonding |


INSTALLATION

GROUNDING THE POWER SUPPLY

⚠ DANGER Improper connection of the equipment grounding conductor could result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug and cord set provided.

Earthed Tools (Three-Pin Plugs)

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord with an earthing conductor and a 3 pin plug. The plug must be plugged into an outlet that is properly installed and earthed in accordance with all local codes and ordinances.

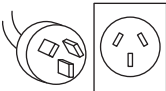

Grounding the Power Supply

The power supply bonding terminal is connected to the earth terminals of each outlet.

Before using the bonding terminal, consult a qualified electrical worker with an understanding of the requirements that apply to the intended use of the power supply.

The power supply is isolated from the frame and from the AC outlets' earth pin.

Electrical devices that require an earthed outlet connection will not function if the outlet earth pin is not functional.

Inserting/Removing Power Cord

⚠ WARNING Charge power supply only with the provided power cord. If damaged or missing, replace with identical replacement parts.


To charge the power supply, connect the provided power cord to the AC input on the power supply, and then to an appropriate 230-240 V 10 A outlet. Remove the power cord when not charging the power supply. To store the power cord, wrap it around the cord holders.

ASSEMBLY

Expanding/Collapsing the Handle

To **expand** the handle, press the handle button in the middle and pull the handle up.

To **collapse** handle, press the handle button in the middle and push the handle down.

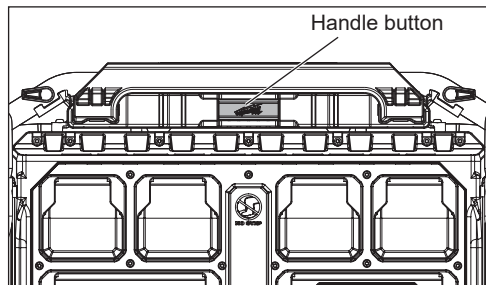

Using the Side Charger Mounts

⚠ WARNING To reduce the risk of injury, fire, or explosion due to damaged battery packs, remove side mounted chargers before transporting.

Follow charger manufacturer's instructions for installation and use.

To **install** a charger, use a screw driver to back out the T-20 fasteners enough to slide the key-hole slots of the charger onto the power supply mounting screws. Align the charger's key-hole mounting slots with power supply's charger mounts and push the charger down and into place.

To **remove** charger, unplug the charger and slide the charger up and away from the charger mounts.

ONE-KEY™

To learn more about the ONE-KEY™ functionality for this tool, go to milwaukee tool.com.au/ONE-KEY. To download the ONE-KEY™ app, visit the App Store® or Google Play™ from your smart device.

ONE-KEY™ Indicator

Solid Blue	Wireless mode is active and ready to be configured via the ONE-KEY™ app.
Blinking Blue	Tool is actively communicating with the ONE-KEY™ app.
Blinking Red	Wireless mode is active and ready to be configured via the ONE-KEY™ app.

TRANSPORTATION

⚠WARNING Use multiple people whenever it is necessary to lift or carry the power supply. The power supply is heavy. Lift with legs, not back. To reduce the risk of injury, fire, or explosion due battery damage:



- Remove side mounted chargers before transporting.
- Do not place more than 25 kg on top of the power supply when transporting. Do not load higher than 30 cm (11")
- Only lift the power supply by the roll cage, do not lift by the handle.
- Do not transport power supply with corded equipment plugged into the outlets.
- When moving power supply, do not overreach. Keep proper footing and balance at all times. Clear the area of obstructions. This enables better control in unexpected situations.
- Secure the power supply before transporting to prevent tipping, rolling, slipping and falling.

Lifting by the Roll Cage

Always maintain firm footing and use multiple people to lift when not using a lift device. To lift, have at least two people grasp the roll cage from around the power supply.

Transporting in a Vehicle

Using suitably rated tie downs, secure the power supply roll cage to a solid attachment point in the vehicle.

Transporting on a Jobsite

To roll power supply, extend the handle and tilt the power supply back onto the wheels. Push the power supply on smooth surfaces and pull on uneven surfaces.

NOTICE The power supply may tip unexpectedly on highly uneven or sloped ground.

OPERATION

⚠WARNING To reduce the risk of shock, inspect the power supply before each use. Do not use a power supply or corded equipment that has been damaged or modified. Damaged or modified products may exhibit unpredictable behaviour.

Power Supply Capacity

Ensure the power supply's rated and peak watts capacity is greater than the total of the corded equipment. Rated watts is the amount of power the power supply must produce to keep the equipment running. Peak watts is the short burst of power needed to start electric motor-driven tools, such as a circular saw.

1. Find the rated and peak watts for the corded equipment (from the equipment labels, literature, or estimated values below).
2. Use the peak watts from the highest rated item, and the rated watts from the rest of the items. Because not all motors start at the same time, total peak watts can be estimated by including only the item with the highest peak watts.
3. Example:

Highest Peak W (Circular Saw)	2300 Peak W
Radio	50 Rated W
Portable Fan	40 Rated W
Electric Drill	600 Rated W

Total 2990 W

Total Corded Equipment < Power Supply
2990W < 3600W

Application/ Equipment	Estimated Rated Watts*	Estimated Peak Watts*
Job Site		
Electric Drill - 10 mm	600	1000
Work Light	1000	1000
Reciprocating Saw	960	1920
Circular Saw - 7-1/4"	1400	2300
Miter Saw - 10"	1800	2800
Air Compressor 1/4 HP	970	1600
Airless Sprayer 1/3 HP	600	1200
Radio	50	50
M18™/M12™ Standard Charger (M12-18 C)	60	60
M18™/M12™ Rapid Charger (M12-18 FC)	75 (M12™) 120 (M18™)	75 (M12™) 120 (M18™)
Lifestyle		
Microwave	1000	1000
TV	50-200	50-200
Satellite Receiver	250	250
Portable Fan	40	120
Heater	1300	1300
String Lights	50-150	50-150
Laptop	50-150	50-150
Tablet	15	15
Mobile Phone	5	5
*Wattages listed are approximate. Check tool or appliance for actual wattage.		

Runtime/Time to Charge

When the charge indicator ⚡ is displayed, the remaining time to charge and status of charge percent is shown. When charge indicator ⚡ is not displayed the remaining runtime is shown.

Using the Power Supply

⚠WARNING Use corded equipment according to the equipment manufacturer's instructions and in locations specified by the manufacturer. Unit is not suitable for outdoor/rain use.

During transport, follow charger instructions on use in unattended situations. Injury, damage, fire, etc., could occur from unanticipated situations.

Do not use the power supply as a workbench where cutting, drilling, or other activities could cause damage to the power supply.

Always assume the AC outlets are live. The auto start ONE-KEY™ feature can result in unexpected starting of corded equipment.

This power supply converts DC electricity to 230 V AC household power and/or USB charging power. Protect the power supply from rain or moisture during use. The power supply must be charged before first use.

•Only use the product in upright condition.

•To prolong the life of the product and attached devices, add devices one at a time.

•Always assume the AC outlets are live. Use caution when using auto start ONE-KEY™ feature.

•Test RCD monthly.

•The correct and safe way to manage the power of the product is to add the loads sequentially.

1. Press the power button ① to turn the power supply on. The power button LED will illuminate white.
2. Press the AC power button or USB power button to provide power to their outlets. The AC or USB power button LED will illuminate white.
3. Inspect corded equipment. Ensure there is no damage to the corded equipment.
4. Plug in and turn on the first load, preferably the largest load to avoid overload. To prolong the life of the power supply and corded equipment, plug in equipment one at a time.
5. Plug in and turn on the next load.
When finished, press the power button ① to turn off the power supply and unplug the corded equipment.

USB Outlets

Press the USB power button to turn power on and off to the USB outlets. Plug in a USB device, place the device into the storage compartment, and close the storage door completely.

It is recommended to use USB cord lengths of 3 metres or less.

Pass-Through Power

The power supply can charge and provide output power through its outlets at the same time. If the power draw is greater than the charging speed, the power supply's overall charge status will decrease until it powers off. Allow the power supply to continue to charge. Once sufficiently re-charged, restart the AC outlets (see "Using the Power Supply").

Display Indicators	
①	Power Button - Current status: White solid - On White pulsing - Charging White flashing - Low Charge (<10%) Green solid - Fully Charged Red solid - Overload or Over-Temperature Red flashing - No Charge (<1%) or Overload/Over-Temperature cleared Red/Green flashing - Fault or Charging Fault Amber solid - Integrated Battery Fault
⚡	Charging Indicator Power supply is charging
I	Status of Charge Gauge Increases when charging, decreases during AC output use
100%	Status of Charge Percent Increases when charging, decreases during AC output use
88:88	Runtime/Time To Charge Remaining run time during AC or USB output Time until full charge during charging
	Power Gauge The total kVA draw during AC output use
	AC On AC outlets have been turned on
	USB On USB outlet has been turned on
	Lock Refer to the ONE-KEY™ app for information regarding this feature
	Auto Restart Refer to the ONE-KEY™ app for information regarding this feature
	Slow Charge Refer to the ONE-KEY™ app for information regarding this feature
	Overload The AC output exceeds the power supply's capacity - See "Overload"
	Over-Temperature The power supply's temperature is above the acceptable range - See "Over-Temperature"
	Under-Temperature The power supply's temperature is below the acceptable range - See "Under-Temperature and Cold Weather Operation"
	Fault - See "Fault Situations" AC Output (discharging) Power Button flashing Red/Green AC Input (charging) Charging Fault icon also displays Power Button flashing Red/Green Integrated Battery Power Button solid Amber
	Charging Fault - See "Fault Situations" Charging Fault - See "Fault Situations" There is a problem with the AC Input (charging)

Slow Charge/Adjustable Charge Rate

Multiple power supplies can be charged on a single power circuit by adjusting the charge rate via the ONE-KEY™ app.

Overload

An overload is indicated by a long tone and an overload indicator on the display. The power button LED will illuminate red.

Once the overload is cleared, the power button LED will flash red and the overload indicator will still be displayed. To reset, push the power button. The power button LED will return to white. If it continues to illuminate red, the overload has not been fully cleared.

After five consecutive overloads, the power supply will need to be plugged in to reset the integrated battery.

Over-Temperature

An over-temperature condition is indicated by the over-temperature indicator on the display and the power button LED will illuminate red. The AC and USB outlets are turned off.

Allow the power supply to cool before continuing use. Once the power supply has cooled to within the acceptable range, the power button LED will flash red and the over-temperature indicator will still be displayed. To reset, push the power button. The power button LED will return to white. If it continues to show red, the over-temperature has not been fully cleared.

Under-Temperature and Cold Weather Operation

⚠WARNING To reduce the risk of explosion, do not use an external device to heat the power supply.

Charging:

If the Under-Temperature icon is displayed, the power supply won't charge. If the power supply charge is too low, move the power supply to a warmer area to raise the temperature.

Discharging:

This power supply is designed to operate in temperatures below freezing. When the integrated battery is too cold, it may need to warm up before normal use.

Connect a 230V light to one of the AC outlets (up to 1000 W) to warm the integrated battery. If the application load is too heavy, the power supply will overload (see "Overload").

WIRELESS COMMUNICATION

Interference

Electrical interference from other equipment may cause unexpected results from the power supply. If the power supply shuts off or shows inaccurate information on the display:

1. Move the power supply away from the interference.
2. Turn off the power supply, wait 60 seconds, and restart.
3. Unplug the power supply, wait 60 seconds, and restart.

CHARGING

⚠WARNING To reduce the risk of shock, charge power supply only with the provided power cord. Do not use if the power cord set is damaged in any way. If damaged or missing, replace with identical replacement parts.

When to Charge the Power Supply

- It is not necessary to run down the integrated battery before charging the power supply.
- Use the status of charge gauge, runtime, and power gauge on the display to determine when to charge the power supply.
- Nearing end of discharge is indicated by repeated short tones, and the gauges flashing.
- Full discharge is indicated by a long tone and the power supply shutting down.

Charging the Power Supply

1. Move the power supply indoors before charging.
2. Plug the power cord into an AC outlet. The power supply will begin charging.
 - The power button LED will pulse white.
 - The charging indicator will display.
 - The time to charge will display.
 - The status of charge percent will display.
3. When charging is complete, the power button LED will illuminate green.
4. If the power supply is too hot or cold, refer to "Over-Temperature" or "Cold Weather Operation". Once the integrated battery is within the acceptable range, normal charging will take place.
5. If the power supply is left plugged in during use with corded equipment, it will continue to charge (see "Pass-Through Power").

Fault Situations

Multiple fault situations may be displayed. The power button LED is used with the fault indicator to identify the type of issue.

To **clear** a fault or charging fault:

1. Turn off the power supply.
2. Unplug all corded equipment.
3. Unplug the power cord.
4. Wait at least 60 seconds.
5. Plug in the power cord.
6. Turn on the power supply.

If the fault icons are not displayed, the fault has cleared. Restart use of the power supply.

If the fault icons reappear, or if the power button LED is solid amber, contact **MILWAUKEE®** Customer Service or visit our website - see "Service - Australia and New Zealand".

To **reset** the outlets:

Push the respective circuit breaker reset button.

To **reset** the power supply:

Press and hold the power button for 30 seconds.

MAINTENANCE AND STORAGE

⚠WARNING To reduce the risk of fire, personal injury, and power supply damage, do not allow fluids to flow into power supply. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

⚠WARNING To reduce the risk of injury, unplug the power cord from outlet when not in use and before servicing or cleaning. Do not disassemble power supply. Contact **MILWAUKEE®** for ALL repairs.

Maintain Power Supply

Keep your power supply in good repair by adopting a regular maintenance program. If the power supply does not work properly, contact **MILWAUKEE®** customer service or visit our website - see "Service - Australia and New Zealand".

Cleaning

Clean dust and debris from vents. Keep handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean, since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include petrol, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

Maintenance and Storage

Do not use oil or solvents to clean or lubricate your power supply. The plastic casing will become brittle and crack, causing a risk of injury.

Store at room temperature away from moisture. Do not store in damp locations where corrosion of AC input may occur. Permanent capacity loss can result if the power supply is stored for long periods of time at high temperatures (over 50°C). Do not store in a vehicle.

Charge the power supply before storing long term. After about a year of storage, charge the power supply as normal.

⚠WARNING To reduce the risk of injury or explosion, do not burn or incinerate the power supply even if it is damaged, dead or completely discharged. Toxic fumes and materials are created when burned.

Disposing

Always dispose of your power supply according to federal, state and local regulations. Contact **MILWAUKEE®** customer service or visit our website - see "Service - Australia and New Zealand".

Repairs

This power supply contains an integrated Li-Ion battery core. It is not removable and is only serviceable by **MILWAUKEE®**. For repairs, contact **MILWAUKEE®** customer service or visit our website - see "Service - Australia and New Zealand".

ACCESSORIES

⚠WARNING Use only recommended accessories. Others may be hazardous.

For a complete listing of accessories, go online to milwaukeeetool.com.au / milwaukeeetool.co.nz or contact an authorised distributor.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold by authorised dealers in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty™. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised **MILWAUKEE®** dealer.

For a list of **MILWAUKEE®** dealers, guarantee or service agents please contact **MILWAUKEE®** Customer Service or visit our website.

(Australia Toll Free Telephone Number 1300 645 928)

(New Zealand Toll Free Telephone Number 0800 645 928)

or visit milwaukeeetool.com.au/milwaukeeetool.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Tool (Australia)

26 - 40 Nina Link, Dandenong South,
Victoria, 3175, Australia

Milwaukee Tool (New Zealand)

274 Church Street, Penrose,
Auckland, 1061, New Zealand

DESIGNED BY MILWAUKEE ELECTRIC TOOL CORP.