

OPERATOR'S MANUAL



Cat. No. M12 SAL M12™ STAND AREA LIGHT

IMPORTANT SAFETY INSTRUCTIONS

WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

WORK AREA SAFETY

- •To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- •Store idle light out of reach of children. Warm lights can become hazardous in the hands of children.
- .Do not use outdoors.

ELECTRICAL SAFETY

•To reduce the risk of electric shock, do not put light in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.

PERSONAL SAFETY

- •Do not overreach. Keep proper footing and balance at all times. This enables better control of the light in unexpected situations.
- •Do not use on a ladder or unstable support. Stable footing on a solid surface enables better control of the light in unexpected situations.

BATTERY TOOL USE AND CARE

- •Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use light only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- •When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- •Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

 Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.

•Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

SERVICE

- •Have your light serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the light is maintained.
- Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

SPECIFIC SAFETY RULES

- Warning The lens may get hot during use. To reduce the risk of burns, do not touch hot lens.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE[®] service facility for a replacement.

SAVE THESE INSTRUCTIONS

SYMBOLOGY



Volts



Direct Current



Alternating Current



Amps



Always extend legs before raising the poles.



Keep hands clear of housing when collapsing the extension poles.



ACAUTION Bright Light Do Not Stare Into Light



Read operator's manual.



Regulatory Compliance mark (RCM). This product meets applicable regulatory requirements.



Class III protection

SPECIFICATIONS Cat. No. M12 SAL Volts 12V DC Input power 15 W


Use only *MILWAUKEE*[®] M12™ Li-lon battery packs

Recommended Ambient

Operating Temperature.....-17°C to 51°C

FUNCTIONAL DESCRIPTION

- 1. Head
- 2. Extension poles
- 3. Battery bay
- 4. Legs
- Carrying handle
- Leg release buttons
- 7. Switch

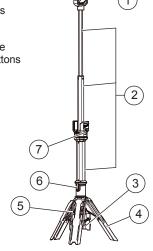

ASSEMBLY

WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

Insert the battery pack by sliding battery pack into the battery bay. Insert the battery pack until the battery latches lock.

To **remove** the battery pack, press in both battery latches and slide the battery pack out of the battery bay.

! WARNING To reduce the risk of injury, do not look directly into the light when the light is on.

 
To reduce the risk of injury, always fully extend and lock legs into position before raising the poles. Light may tip and cause injury.

To reduce the risk of injury, keep hands clear of the housing area when collapsing the extension poles. Head may descend rapidly, pinching hands and fingers.

Extending/Collapsing the Legs

Always extend and lock legs before raising the poles.

 To extend, press in the release buttons on both sides of the collar and slide the legs down while lifting the light head up. The legs will latch into place. To collapse, hold the light head and press the release buttons. Slide the collar up until the legs latch into place.



Raising/Lowering the Head

The light can be used with the head in 3 positions; bottom, midrise, and top. To set poles at correct height, extend or collapse the two poles by pulling firmly until the detents lock the poles in place.

OPERATION

!\WAKNINGTo reduce the risk of injury, do not look directly into the light when the light is on.

Using the Light

Insert battery pack.

Use the switch to cycle through High, Low, and OFF. Press and hold to turn OFF from any setting.

MAINTENANCE

WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a MILWAUKEE® service facility for ALL repairs.

Maintaining Light

Keep your light, battery pack and charger in good repair by adopting a regular maintenance program. If the light does not work properly, return the light to a MILWAUKEE® service facility for repairs.

Personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

ACCESSORIES

∆WARNING

Use only recommended accessories. Others may be hazardous. For a complete listing of accessories refer to your MILWAUKEE® Tool catalogue or go online to www.milwaukeetools.com.au/

www.milwaukeetools.co.nz. To obtain a catalogue, contact your local distributor or a service centre.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE[®] prides itself in producing a premium quality product that is Nothing But Heavy Duty[®]. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised *MILWAUKEE*[®] dealer.

For a list of *MILWAUKEE*® dealers, guarantee or service agents please contact *MILWAUKEE*® Customer Service or visit our website.
(Australia Toll Free Telephone Number 1300 645 928)
(New Zealand Toll Free Telephone Number 0800 279 624)
or visit www.milwaukeetools.com.au / www.milwaukeetools.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Tool (Australia)

21 Kelletts Road, Rowville, VIC 3178 Melbourne, Australia

Milwaukee Tool (New Zealand)

2 Landing Drive, Mangere Auckland, 2022, New Zealand

Designed by Milwaukee Electric Tool Corp.

Professionally Made in China for Milwaukee Tool (Australia) / Milwaukee Tool (New Zealand)

Printed in China