



M12™ POWER SOURCE

IMPORTANT SAFETY INSTRUCTIONS

! WARNING READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save these instructions - This operator's manual contains important safety and operating instructions for the MILWAUKEE® M12™ Power Source. Before using the Power Source, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and Power Source.

WORK AREA SAFETY

• **Avoid dangerous environments.** Do not use in rain, snow, damp or wet locations. Do not use in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when inserting or removing battery pack, possibly causing fire.

ELECTRICAL SAFETY

• **Do not use an extension cord with the appliance.** Using an extension cord could result in the risk of fire and electrical shock.

PERSONAL SAFETY

- **Follow appliance manufacturer's instructions regarding operation and power.** Use of the appliance different from those intended could result in a hazardous situation.
- **Use the correct appliance for the application.**
- **Stay alert, watch what you are doing and use common sense when operating power source. Do not use while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention may result in serious personal injury.

USE AND CARE

- **Disconnect plugs from the power source and remove the battery pack before storing.** Such preventive safety measures reduce the risk of starting the appliance accidentally.
- **Store idle appliances and power source out of the reach of children and do not allow persons unfamiliar with the appliance, power source or these instructions to operate them.** Appliances and power source are dangerous in the hands of untrained users.
- **Maintain appliances and power source. Check for misalignment, breakage of parts and any other condition that may affect the appliance and power source operation. If damaged, have the appliances or power source repaired before use.** Many accidents are caused by poorly maintained appliances and power sources.
- **Use the power source in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power source for operations different from those intended could result in a hazardous situation.
- **Keep power source away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the terminals together may cause burns or a fire.

USE AND CARE WITH MILWAUKEE® HEATED GEAR

- **Disconnect and remove battery pack and power source from battery holder pocket before washing MILWAUKEE® Heated Gear.**
- **Do not dry clean.** Do not use dry-cleaning fluid on heated jackets. Do not bleach. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.
- **Follow Use and Care instructions on jacket tags. Hand wash, hang dry. Do not wring. Do not machine wash or machine dry** even though machine may include a hand wash or equivalent cycle as an electric shock or fire may result.
- **Do not iron.**

BATTERY USE AND CARE

- **Power source is rated for 12V DC only.** Use only appropriate MILWAUKEE® M12™ battery packs. Use of any other battery packs may create a risk of injury and fire.
- **Recharge only with the MILWAUKEE® 12V Li-ion chargers.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **To reduce the risk of electric shock,** always remove battery pack before cleaning or maintenance.

ASSEMBLY

! WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.


Inserting/Removing the Battery

To insert the battery, slide the pack into the body of the power source. Make sure it latches securely into place.

To remove the battery, push in the release buttons and pull the battery pack away from the power source.

FUNCTIONAL DESCRIPTION

1. Power Cable Port
2. Fuel Gauge
3. USB Power Button
4. USB Port

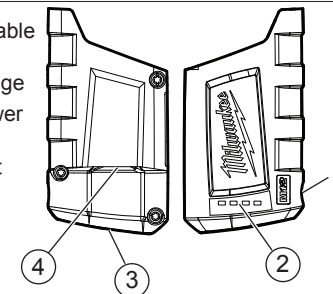

OPERATION

Using the M12™ Power Source with MILWAUKEE® Heated Gear

The M12™ Power Source supplies power to both the heated jacket and the power source USB port. Insert the power cable (from inside the battery pocket) into the power cable port on the power source. Place the power source into the pocket and zip closed. If necessary, unzip the expansion zipper to accommodate larger battery packs. Use the jacket's power button(s) to control the settings.

Using the USB Port

The USB port can be used to charge a cell phone, MP3 player, or other personal device that uses less than 5V, 2.1A of DC electrical current.

To turn on the USB, press the USB power button. The USB port will remain on for two hours before turning off automatically.

Note: When used with MILWAUKEE® Heated Gear, the cord can be run from the battery pocket, through the grommet and channel on the interior of the jacket, and through another grommet into a side pocket. It is not recommended to use the pocket warmer when an electronic device is charging in a pocket.

Fuel Gauge

Press the USB power button to display the battery pack's remaining power.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold by authorised dealers in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty™. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised MILWAUKEE® dealer.

For a list of MILWAUKEE® dealers, guarantee or service agents please contact MILWAUKEE® Customer Service or visit our website.

(Australia Toll Free Telephone Number 1300 645 928)

(New Zealand Toll Free Telephone Number 0800 645 928)

or visit milwaukeetool.com.au/milwaukeetool.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Tool (Australia)

21 Kelletts Road, Rowville, VIC 3178
Melbourne, Australia

Milwaukee Tool (New Zealand)

274 Church Street, Penrose,
Auckland, 1061, New Zealand

DESIGNED BY MILWAUKEE ELECTRIC TOOL CORP.

PROFESSIONALLY MADE IN CHINA

PRINTED IN CHINA